



| Original   | Replacement   |
|--|---|
|  Power    |  Power                       |
|  Mute     |  Mute / Dimmer               |
|  Nicam/A2 |  Shift + Audio / Lang I/II   |
|  Aspect   |  Shift + Picture / Format    |
|  P.Mode   |  Picture / Format            |
|  S.Mode   |  Sound / Title               |
|  1        |  1                           |
|  2        |  2                           |
|  3        |  3                           |
|  4        |  4                           |
|  5       |  5                          |
|  6      |  6                         |
|  7      |  7                         |
|  8      |  8                         |
|  9      |  9                         |
|  -/-    |  Shift + Guide / EPG / -/- |
|  0      |  0                         |

| Original   | Replacement   |
|--|---|
|  Recall   |  Back / Return               |
|  Display  |  Display / Media             |
|  Freeze   |  Pause / Step / Freeze       |
|  Rec/Auto |  Rec / Rec Mode              |
|  Red      |  Red / Netflix / Search      |
|  Green    |  Green / APP / Repeat        |
|  Yellow   |  Yellow / YouTube / Repeat   |
|  Blue     |  Blue / Prime Video / Random |
|  Sleep    |  Sleep / Timer               |
|  Up       |  Up                          |
|  Source  |  AV / Input / RDS           |
|  Left   |  Left                      |
|  Enter  |  OK                        |
|  Right  |  Right                     |
|  Down   |  Down                      |
|  Menu   |  Menu / Home               |
|  Exit   |  Exit / Cancel / Clear     |



