



Original	Replacement	Original	Replacement
 Power	 Power	 2	 2
 e	 Smart / List	 3	 3
 Aspect Ratio	 Picture / Format	 PgUp	 CH+ / Page+
 Freeze	 Pause / Step / Freeze	 Input VGA	 Shift + 6
 Hide	 Display / Media	 4	 4
 Zoom / Mouse	 Zoom / Size	 Input	 Shift + 7
 ReSync	 Setup / OPT /	 5	 5
 Source / Mouse Right	 AV / Input / RDS	 Input Video	 Shift + 4
 Keystone Up	 Vol+	 6	 6
 Up	 Up	 PgDn	 CH- / Page-
 Left	 Left	 Input S-Video	 Shift + 5
 Menu	 Menu / Home	 7	 7
 Menu	 OK	 Input HDMI	 Shift + 0
 Right	 Right	 8	 8
 Keystone Down	 Vol-	 Intut Wireless	 Shift + 9
 Down	 Down	 9	 9
 1	 1	 Mute	 Mute / Dimmer





Original		Replacement	
MUTE 0	0	HDMI - BAT 0	0

Original		Replacement	

