


 

 
 
 

 
 

 
 






 












Original	Replacement
 Power	 Power
 Sleep	 Sleep
 Display	 Info
 Clock Timer	 Guide
 Clock Timer Set	 Options
 Tuner Memory	 3D
 Play Mode/Tuning Mode	 TV/R
 Repeat/FM	 Text
 Tape	 Red
 Band/Tuner	 Green
 CD	 Yellow
 Function	 Menu
 >>I/+	 >>I
 I<</-	 I<<
 >>	 >>
 <<	 <<
 Play	 Play

Original	Replacement
 Pause	 Pause
 Stop	 Stop
 Clear	 Exit
 Enter	 Ok
 EQ	 Dual
 Disc Skip	 List
 Vol+	 Vol +
 Vol-	 Vol -
 Album+	 Ch +
 Album-	 Ch -

