 



 











 



 

 


 







Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Text	 Text / Goto
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Audio	 Audio / Lang I/II

Original	Replacement
 Sleep	 Sleep / Timer
 Source	 AV / Input / RDS
 CH+	 CH+ / Page+
 Vol+	 Vol+
 Display	 Display / Media
 CH-	 CH- / Page-
 Vol-	 Vol-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Menu	 Menu / Home
 OK	 OK





Original	Replacement	Original	Replacement
Exit	Exit / Cancel / Clear		Timeshift
Subtitle	Subtitle / EQ		Tv/Radio
Index	Info / Angle		
Size	Zoom / Size		
Reveal	D.Menu / Top		
Mix	Setup / OPT /		
Play	Play / Slow		
Pause/Hold	Pause / Step / Freeze		
I<</Cancel	I<< / Preset-		
>>I/Subpage	>>I / Preset+		
EPG	Guide / EPG / -/-		
FAV	Fav / Marker / PC		
Stop	Stop / Hold		
<</FAV-	<< / Tune-		
>>/FAV+	>> / Tune+		
Media	+ Shift + Display / Media		
Rec	Rec / Rec Mode		

	Smart / List		
	TV/Radio /		

