
 

 





 

 
 



 



 

 















 





Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Exit	 Exit / Cancel / Clear
 6	 6	 Down	 Down
 7	 7	 Display	 Display / Media
 8	 8	 FAV	 Fav / Marker / PC
 9	 9	 Vol+	 Vol+
 0	 0	 FAV+	 Shift + Yellow / YouTube /
 -/--	 Shift + Guide / EPG / -/--	 CH+	 CH+ / Page+
 Recall	 Back / Return	 Vol-	 Vol-
 P.Mode	 Picture / Format	 Repeat/FAV-	 Shift + Green / APP /
 S.Mode	 Sound / Title	 CH-	 CH- / Page-
 Auto	 Eject / Surround	 Text	 Text / Goto





	Original	Replacement		Original	Replacement	
		<<		<< / Tune-		Subtitle
		>>/Hold		>> / Tune+		Subtitle / EQ
		I<</Index		I<< / Preset-		
		>>I/Size		>>I / Preset+		
		Play		Play / Slow		
		Pause/Timeshift		Pause / Step / Freeze		
		Stop/Subpage		Stop / Hold		
		Zoom/Reveal		Zoom / Size		
		Sleep		Sleep / Timer		
		Tv/Radio		TV/Radio /		
		Red		Red / Netflix / Search		
		Green		Green / APP / Repeat		
		Yellow		Yellow / YouTube / Repeat		
		Blue		Blue / Prime Video / Random		
		Audio/Nicam		Audio / Lang I/II		
		Guide		Guide / EPG / -/--		
		Rec		Rec / Rec Mode		

