



Original	Replacement
 Standby	 Power
 Source	 AV / Input / RDS
 Home	 Shift + Menu /
 e	 D.Menu / Top
 Mouse	 Info / Angle
 TV / Radio	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Display	 Display / Media
 0	 0

Original	Replacement
 Recall	 Back / Return
 Recall	 Fav / Marker / PC
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Down	 Down
 Stop	 Stop / Hold
 Vol +	 Vol+
 TXT	 Text / Goto
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Mute	 Mute / Dimmer





Original	Replacement	Original	Replacement
	CH -		CH- / Page-
	Mix / Fav. List		Subtitle / EQ
	Mix / Fav. List		Smart / List
	Size / Subtitle		Zoom / Size
	Cancel / Audio		Audio / Lang I/II
	Refresh		Guide / EPG / -/--
	<< / Index		<< / Tune-
	>> / Hold		>> / Tune+
	I<< / Reveal		I<< / Preset-
	>>I / Subpage		>>I / Preset+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original	Replacement	Original	Replacement

