

















 








 












Original	Replacement
 Standby	 Power
 Auto / Eject	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv / Radio	 TV/Radio /
 Recall	 Back / Return
 Vol+	 Vol+
 Title / Pr List	 Shift + Sound / Title
 Title / Pr List	 Smart / List

Original	Replacement
 Menu / EPG	 D.Menu / Top
 Menu / EPG	 Guide / EPG / -/-
 Ch+	 CH+ / Page+
 Vol-	 Vol-
 FAV	 Fav / Marker / PC
 Ch-	 CH- / Page-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 LCD Menu / Exit	 Menu / Home
 Down	 Down
 DVD Setup / Exit	 Setup / OPT /
 DVD Setup / Exit	 Shift + Exit / Cancel / Clear
 Input	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title





Original	Replacement
 Mute	 Mute / Dimmer
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Exit / Stop	 Exit / Cancel / Clear
 Exit / Stop	 Stop / Hold
 Sleep	 Sleep / Timer
 Audio	 Audio / Lang I/II
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 Zoom	 Zoom / Size
 Subpage / Goto	 Text / Goto
 Index / I<<<	 I<<< / Preset-
 Size / >>>I	 Shift + Zoom /
 Size / >>>I	 >>>I / Preset+
 Reveal	 Display / Media
 Subtitle	 Subtitle / EQ
 Red / Mode	 Red / Netflix / Search

Original	Replacement
 Green / Clear	 Green / APP / Repeat
 Yellow / Repeat	 Yellow / YouTube / Repeat
 Yellow / Repeat	 Shift + Green / APP /
 Blue / AB	 Blue / Prime Video / Random
 Blue / AB	 Shift + Yellow / YouTube /

