

















 



 














	Original	Replacement	Original	Replacement
	Power			
	Bluetooth / AUX			
	Bluetooth / AUX			
	1			
	2			
	3			
	4			
	5			
	6			
	Vol+			
	Play / Pause			
	Play / Pause			
	Vol-			
	I<<			
	>>I			
	Dislike			
	Like	