 

 



 
 
 
 





 





 

 



 

 

 

 

 

 





 

 
 
 



 









 


 

 

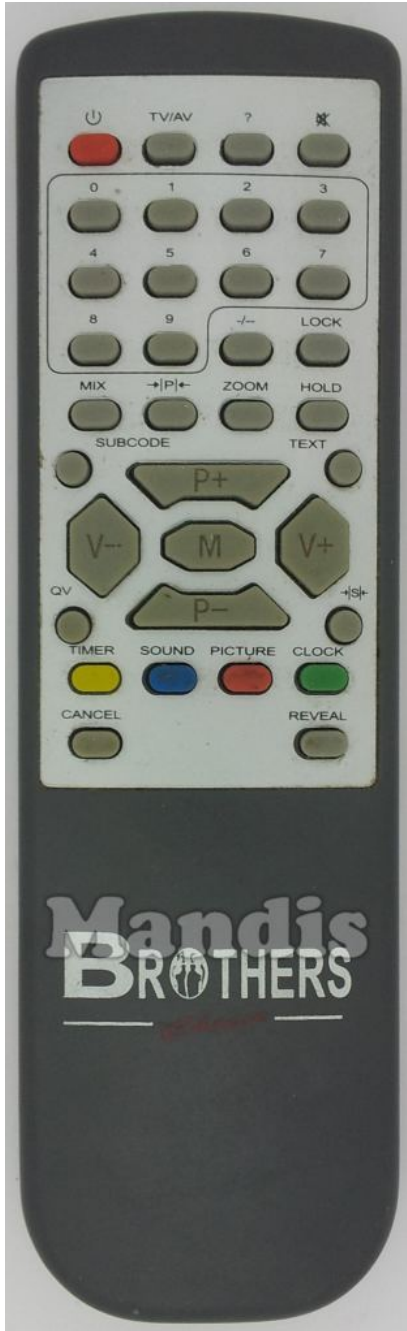 




 





 



Original	Replacement	Original	Replacement
 Power	 Power	 Hold	 Subt.
 Tv/AV	 SRC	 → P ←	 V-FOR
 ?	 VOD	 MIX	 MEDIA
 Mute	 MUTE	 TEXT	 TEXT
 0	 0	 SUB	 OPT+
 1	 1	 QV	 TV/R
 2	 2	 → S ←	 Audio
 3	 3	 CANCEL	 EXIT
 4	 4	 REVEAL	 BACK
 5	 5	 Yellow/Timer	 Yellow (C)
 6	 6	 Blue/Sound	 Blue (D)
 7	 7	 Red/Picture	 Red (A)
 8	 8	 Green/Clock	 Green (B)
 9	 9	 Up	 UP
 -/--	 -/-- / EPG	 Down	 DOWN
 Lock	 P/C / FAV	 Right	 RIGHT
 Zoom	 WIDE	 Left	 LEFT





	Original	Replacement		Original	Replacement
	OK		OK		
	P+		CH +		
	P-		CH -		
	Vol+		VOL +		
	Vol-		VOL -		
	M		MENU		

