













Original	Replacement
 Power	 Power
 AV	 AV / Input / RDS
 Mute	 Mute / Dimmer
 16:9	 Picture / Format
 Zoom	 Zoom / Size
 Subt.	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 1	 1
 2	 2
 3	 3
 FAV	 Fav / Marker / PC
 4	 4
 5	 5
 6	 6
 EPG	 Guide / EPG / -/--
 7	 7
 8	 8

Original	Replacement
 9	 9
 Info	 Info / Angle
 Back	 Back / Return
 0	 0
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Vol-	 Vol-
 Vol+	 Vol+
 PR-	 CH- / Page-
 PR+	 CH+ / Page+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Replacement	Original	Replacement
	Yellow  Yellow / YouTube / Repeat		
	Blue  Blue / Prime Video / Random		
	TXT  Text / Goto		
	♪  Sound / Title		
	[]  Smart / List		
	Swap  Sleep / Timer		
	PIP  D.Menu / Top		
	Pos  Setup / OPT /		
	Size  Shift + Zoom /		
	Freeze  Pause / Step / Freeze		

