

 


 







 
 


 

 








Original	Replacement
 Open/Close	 Eject / Surround
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10+	 Shift + Guide / EPG / -/--
 Display	 Display / Media
 Mute	 Mute / Dimmer
 Title/TTX	 Text / Goto
 Menu	 Menu / Home

Original	Replacement
 Prog/EPG	 Guide / EPG / -/--
 PBC	 Shift + 0
 Goto	 Shift + Text /
 Vol-	 Vol-
 Vol+	 Vol+
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Setup	 Setup / OPT /
 Return	 Back / Return
 Source	 AV / Input / RDS
 Tv/Radio	 TV/Radio /
 Up	 Up
 Down	 Down
 FAV-	 CH- / Page-
 Left	 Left
 Right	 Right





Original	Replacement
 FAV+	 CH+ / Page+
 Enter	 OK
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 3D	 Picture / Format
 Subtitle	 Subtitle / EQ
 Zoom	 Zoom / Size
 Mode	 Shift + Display / Media
 Digest	 Sound / Title
 Language	 Audio / Lang I/II
 L/R	 Red / Netflix / Search
 P/N	 Sleep / Timer
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 Angle	 Info / Angle

Original	Replacement
 Slow	 Shift + Play /

