


 

 

 

 

 





 



 











 

 





 

 

 
 
 

 

 

 

 

 

 

 

 



 




Original		Replacement		Original		Replacement	
	Power		Power		i		INFO
	Mute		MUTE		EPG		MEDIA
	1		1		EXIT		EXIT
	2		2		Up		UP
	3		3		Down		DOWN
	4		4		Right		RIGHT
	5		5		Left		LEFT
	6		6		Ok		OK
	7		7		TV / Radio		TV/R
	8		8		Zoom		WIDE
	9		9		Prog -		CH -
	0		0		Prog +		CH +
	Pause		Pause		F1		OPT+
	Fav		VOD		P/N		BACK
	Sat		-/-- / EPG		Text		TEXT
	Recall		P/C / FAV		Subtitles		Subt.
	Menu		MENU		Red / Audio		Red (A)





Original	Replacement	Original	Replacement
Audio	Audio		
Green / Mosaic	Green (B)		
Yellow / Clock	Yellow (C)		
Blue / Text	Blue (D)		
TV/SAT	SRC		
Vol -	VOL -		
Vol +	VOL +		
Page +	Last		
Page -	First		
Page -	Rewind		
Page +	Fast Forward		
UHF	V-FOR		
PIP	SHIFT + V-FOR Shift + V-FOR		

