



 

 

 

 

 

 

 

 

 





 

 

 











 

 











 

 



 

 
 






Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	List		Smart / List
	CH +		CH+ / Page+
	Vol -		Vol-
	CH -		CH- / Page-
	Fav		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Recall		Back / Return
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-

 



 

 

 

 

 





 



 



 

 











 

 











 





 

 
 








Original	Replacement	Original	Replacement
 Green / >>	 >> / Tune+		
 Green / >>	 Green / APP / Repeat		
 Yellow / I<<	 I<< / Preset-		
 Yellow / I<<	 Yellow / YouTube / Repeat		
 Blue / >>I	 Blue / Prime Video / Random		
 Blue / >>I	 >>I / Preset+		
 Text / Play/Pause	 Text / Goto		
 Text / Play/Pause	 Pause / Step / Freeze		
 Text / Play/Pause	 Play / Slow		
 Stop / Still	 Stop / Hold		
 Timer / Subtitle	 Subtitle / EQ		
 Size / Aspect	 Zoom / Size		
 Cancel [≡X]	 Shift + Exit / Cancel / Clear		
 Radio	 TV/Radio /		
 Audio / I/II	 Audio / Lang I/II		
 Rec	 Rec / Rec Mode		






Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[≡?]/Source		AV / Input / RDS
	0		0
	[≡i]/Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	List		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Back		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-





Original	Replacement
 Green	 Green / APP / Repeat
 >>	 >> / Tune+
 Yellow	 Yellow / YouTube / Repeat
 I<<	 I<< / Preset-
 Blue	 Blue / Prime Video / Random
 >>I	 >>I / Preset+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 [=]	 Text / Goto
 Stop/Still	 Stop / Hold
 [=+]	 Picture / Format
 [=o]/Subtitle	 Subtitle / EQ
 [=♦]/[+]	 Zoom / Size
 [=x]	 Setup / OPT /
 Radio	 TV/Radio /
 Audio	 Audio / Lang I/II
 Rec	 Rec / Rec Mode

Original	Replacement

