











 
































 




















 





| Original  |        | Replacement   |                   | Original  |        | Replacement   |                    |
|---|--------|---|-------------------|---|--------|---|--------------------|
|    | P100   |    | Display / Media   |    | AV     |    | AV / Input / RDS   |
|    | Power  |    | Power             |    | 0      |    | 0                  |
|    | REV    |    | << / Tune-        |    | -/--   |    | Guide / EPG / -/-- |
|    | Doub   |    | Audio / Lang I/II |    | P+     |    | CH+ / Page+        |
|    | 1      |    | 1                 |    | Up     |    | Up                 |
|    | 2      |    | 2                 |    | Mute   |    | Mute / Dimmer      |
|    | 3      |    | 3                 |    | TV/TXT |    | TV/Radio /         |
|    | Hold   |    | Stop / Hold       |    | Menu   |    | Menu / Home        |
|    | 4      |    | 4                 |    | Left   |    | Left               |
|    | 5      |    | 5                 |    | Vol-   |    | Vol-               |
|    | 6      |    | 6                 |    | OK     |    | OK                 |
|  | Sub    |  | Subtitle / EQ     |  | Right  |  | Right              |
|  | Update |  | D.Menu / Top      |  | Vol+   |  | Vol+               |
|  | 7      |  | 7                 |  | Swap   |  | Back / Return      |
|  | 8      |  | 8                 |  | P-     |  | CH- / Page-        |
|  | 9      |  | 9                 |  | Down   |  | Down               |
|  | Mix    |  | Text / Goto       |  | 16:9   |  | Picture / Format   |



