
 
 


 

 






 

 

 
 


 
 
 
 


 



 
 



 


 

 
 
 
 

 

 
 
 

















 

 








Original		Replacement		Original		Replacement	
	Power		Power		Up		Up
	[≡i]/Info		Info		Down		Down
	Mute		Mute		Right		Right
	1		1		Left		Left
	2		2		Enter		Ok
	3		3		CH+		Ch +
	4		4		CH-		Ch -
	5		5		Index		Smart
	6		6		List		List
	7		7		Vol+		Vol +
	8		8		Vol-		Vol -
	9		9		♥		Pre Ch
	0		0		Sleep		Sleep
	[≡?]/Source		AV		EPG		Guide
	(OI/II/Audio		Dual		Back		Back
	Menu		Menu		Red		Red
	Exit		Exit		Green		Green





Original		Replacement		Original	Replacement
	Yellow		Yellow		
	Blue		Blue		
	<<		<<		
	>>		>>		
	<<		<<		
	>>		>>		
	[≡]/Text		Text		
	Play/Pause		Play		
	[≡+]/Still		Format		
	Stop		Stop		
	Radio		TV/R		
	[≡◆*/[+]		3D		
	[≡x]		Options		
	[≡o]/Subtitle		Subt		
	DMP		Media		
	Rec		Rec		

