



 









Original	Replacement	Original	Replacement
 Power	 Power	 --	 Guide / EPG / -/--
 Up / P+	 Up	 0	 0
 Up / P+	 CH+ / Page+	 P < P	 Fav / Marker / PC
 Menu	 Menu / Home	 PP	 Back / Return
 Left	 Left	 Vol+	 Vol+
 Right	 Right	 I-II	 Audio / Lang I/II
 Down / P-	 Down	 Mute	 Mute / Dimmer
 Down / P-	 CH- / Page-	 Vol-	 Vol-
 1	 1	 Info	 Info / Angle
 2	 2	 Red	 Red / Netflix / Search
 3	 3	 Green	 Green / APP / Repeat
 4	 4	 Yellow	 Yellow / YouTube / Repeat
 5	 5	 Blue	 Blue / Prime Video / Random
 6	 6	 [TV]	 Shift + 1
 7	 7	 [TV]	 TV/Radio /
 8	 8	 [AV]	 AV / Input / RDS
 9	 9	 [≡]	 Text / Goto





	Original	Replacement		Original	Replacement
	[≡⊕]	 Subtitle / EQ			
	[/≡]	 Picture / Format			
	[≡X]	 Exit / Cancel / Clear			
	[≡⇕]	 Zoom / Size			
	[≡?]	 Display / Media			
	[≡i]	 Smart / List			







































Original	Replacement
Power	Power
Up / P+	Up
Up / P+	CH+ / Page+
Menu	Menu / Home
Left	Left
Select	OK
Right	Right
Down / P-	CH- / Page-
Down / P-	Down
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8

Original	Replacement
9	9
+10	Guide / EPG / -/-
0	0
Repeat	Green / APP / Repeat
Search	Red / Netflix / Search
A→B	Yellow / YouTube / Repeat
Display	Display / Media
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Zoom	Zoom / Size
Prog	TV/Radio /
C	Blue / Prime Video / Random
Angle	Info / Angle
Return	Back / Return
Time	Sleep / Timer
<< / Tune-	<< / Tune-
>> / Tune+	>> / Tune+





Original	Replacement	Original	Replacement
On/Off	 Power		
Mute	 Mute / Dimmer		
Txt Stop	 Stop / Hold		
Tone+	 >> / Tune+		
Lang	 Sound / Title		
Menu audio	 Audio / Lang I/II		
Subt.List	 Subtitle / EQ		
Txt Expand	 Zoom / Size		
Sleep Timer	 Sleep / Timer		
Return TV	 TV/Radio /		
Menu video	 D.Menu / Top		
Text	 Text / Goto		
Menu	 Menu / Home		
Menu Up	 Up		
Info	 Info / Angle		
Menu Left	 Left		
OK Enter	 OK		

Original	Replacement	Original	Replacement
Menu Right	 Right		
Menu Down	 Down		
Back	 Back / Return		
Volume+	 Vol+		
Chan.Up	 CH+ / Page+		
Volume-	 Vol-		
Display	 Display / Media		
Chan.Down	 CH- / Page-		
1	 1		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		



