





 









 



 






 






























 













Original	Replacement	Original	Replacement
 Power	 Power	 Subtitle	 Subtitle / EQ
 Menu PBC	 Menu / Home	 Slow	 Pause / Step / Freeze
 Title	 Sound / Title	 Program	 TV / Radio /
 Open / Close	 AV / Input / RDS	 USB	 Picture / Format
 1	 1	 Audio	 Audio / Lang I/II
 2	 2	 Mute	 Mute / Dimmer
 3	 3	 Repeat	 Green / APP / Repeat
 4	 4	 Setup	 Yellow / YouTube / Repeat
 5	 5	 Up	 Up
 6	 6	 Zoom	 Text / Goto
 7	 7	 Play / Pause	 Play / Slow
 8	 8	 Left	 Left
 9	 9	 Enter	 OK
 10/0	 0	 Right	 Right
 10+	 Guide / EPG / -/--	 Stop	 Stop / Hold
 Clear	 Fav / Marker / PC	 SRC	 Back / Return
 Display	 Display / Media	 Down	 Down





	Original	Replacement		Original	Replacement
	<<	 << / Tune-			
	>>	 >> / Tune+			
	Vol-	 Vol-			
	Vol+	 Vol+			
	I<<	 I<< / Preset-			
	>>I	 >>I / Preset+			

