



Original	Replacement
Power	Power
Open / Close	Eject / Surround
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
+10	Guide / EPG / -/--
Step	Shift + Pause / Step /
Slow	Shift + Play /
Zoom	Zoom / Size
Angle	Info / Angle

Original	Replacement
Prog	TV/Radio /
Shuffle	Blue / Prime Video / Random
Video	Smart / List
Repeat	Green / APP / Repeat
Repeat A-B	Yellow / YouTube / Repeat
Title	Sound / Title
PBC	Picture / Format
Goto	Text / Goto
L/R	D.Menu / Top
Subtitle	Subtitle / EQ
Setup	Setup / OPT /
Up	Up
Display	Display / Media
Left	Left
Enter	OK
Right	Right
Menu	Menu / Home





	Original	Replacement	Original	Replacement
	 Down	 Down		
	 Return	 Back / Return		
	 Vol+	 Vol+		
	 Mute	 Mute / Dimmer		
	 <<	 << / Tune-		
	 >>	 >> / Tune+		
	 Stop	 Stop / Hold		
	 Vol-	 Vol-		
	 Audio	 Audio / Lang I/II		
	 I<<	 I<< / Preset-		
	 >>I	 >>I / Preset+		
	 Play / Pause	 Play / Slow		
	 Play / Pause	 Pause / Step / Freeze		

