
 






Original	Replacement	Original	Replacement
	OFF	 + 	Shift + Power
	ON		Power
	Standard		Red / Netflix / Search
	Cinema		Green / APP / Repeat
	Music		Yellow / YouTube / Repeat
	DSP Simulation		Blue / Prime Video / Random
	Direct	 + 	Shift + Red / Netflix /
	Stereo	 + 	Shift + Green / APP /
	Virtual Surround	 + 	Shift + Yellow / YouTube /
	5CH/7CH Stereo	 + 	Shift + Blue / Prime
	Input PHONO		0
	Input CD		3
	Input TUNER		6
	Tuning+		>> / Tune+
	Input DVD/VDP		2
	Input TV/DBS		1
	Input VCR		4
	Tuning-		<< / Tune-
	Input VCR-2		9
	Input V.AUX		8
	Input CDR/TAPE		5
	Channel+ /		>> / Preset+
	Channel+ /		CH+ / Page+
	Input AUX		7
	Channel- / Preset-		<< / Preset-
	Channel- / Preset-		CH- / Page-
	Mode		Play / Slow
	Memory		Pause / Step / Freeze
	Band		Stop / Hold
	Shift		Rec / Rec Mode
	Vol+		Vol+
	Vol-		Vol-
	Muting		Mute / Dimmer
	Setup		Setup / OPT /





Original	Replacement	Original	Replacement
	Up		
	Eject / Surround		
	Left		
	OK		
	Right		
	Display / Media		
	Down		
	Back / Return		
	Text / Goto		
	Picture / Format		
	+ Shift + Mute / Dimmer		
	Sound / Title		
	+ Shift + 1		
	+ Shift + 2		
	+ Shift + 3		

