





















 















Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/-	 Shift + Guide / EPG / -/-
 Recall	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Replacement
 Blue	 Blue / Prime Video / Random
 Source	 AV / Input / RDS
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Audio	 Audio / Lang I/II
 Aspect	 Eject / Surround
 Display	 Display / Media
 Tv/Radio	 TV/Radio /
 Rec	 Rec / Rec Mode
 Up	 Up
 Left	 Left
 OK/CH List	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home





Original		Replacement	
	Exit		Exit / Cancel / Clear
	EPG		Guide / EPG / -/--
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Text		Text / Goto
	PVR/Hold		Setup / OPT /
	Size		Zoom / Size
	FAV		Fav / Marker / PC
	Play		Play / Slow
	Pause/Timeshift		Pause / Step / Freeze
	Stop/Auto		Stop / Hold
	Reveal		D.Menu / Top
	Subtitle		Subtitle / EQ
	<</Nicam		<< / Tune-
	>>/Freeze		>> / Tune+
	I<</Index		I<< / Preset-

Original		Replacement	
	>>I/Subpage		>>I / Preset+

