









 

 

 

 





















| Original | Replacement |
|--|--|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Info |  Info / Angle |
|  0 |  0 |
|  Recall |  Back / Return |
|  PMode |  Picture / Format |
|  I / II |  Audio / Lang I/II |
|  EPG |  Guide / EPG / -/-- |

| Original | Replacement |
|---|---|
|  Sleep |  Sleep / Timer |
|  Input |  AV / Input / RDS |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Menu |  Menu / Home |
|  Exit |  Exit / Cancel / Clear |
|  FAV |  Fav / Marker / PC |
|  Vol + |  Vol+ |
|  ADD / DEL |  Shift + Back / Return |
|  PR + |  CH+ / Page+ |
|  Vol - |  Vol- |
|  Cancel |  Shift + Exit / Cancel / Clear |
|  PR - |  CH- / Page- |
|  Red |  Red / Netflix / Search |





| Original | Replacement | Original | Replacement |
|---|---|---|--|
|  Green |  Green / APP / Repeat |  Subpage / Rec |  Rec / Rec Mode |
|  Yellow |  Yellow / YouTube / Repeat |  Index / List |  Smart / List |
|  Blue |  Blue / Prime Video / Random | | |
|  Play / Pause |  Play / Slow | | |
|  Play / Pause |  Shift + Play / | | |
|  Stop |  Stop / Hold | | |
|  Setup |  Setup / OPT / | | |
|  Eject |  Eject / Surround | | |
|  I<< / Text |  Shift + I<< / Preset- | | |
|  I<< / Text |  I<< / Preset- | | |
|  << |  << / Tune- | | |
|  Size |  Zoom / Size | | |
|  S. Title M. |  Sound / Title | | |
|  >>I / Hold |  >>I / Preset+ | | |
|  >>I / Hold |  Shift + >>I / Preset+ | | |
|  >> / Reveal |  >> / Tune+ | | |
|  Subpage / Rec |  Shift + Rec / Rec Mode | | |

