

 



 

 

 

 

 







 

 



 

 

 









 





 







 



 












Original		Replacement		Original		Replacement	
	Power		Power		7		7
	Mute		Mute / Dimmer		8		8
	Audio		Audio / Lang I/II		9		9
	TV / STB		AV / Input / RDS		0		0
	TV / R		TV/Radio /		SAT	 + 	Shift + 0
	Sleep		Sleep / Timer		EPG		Guide / EPG / -/-
	SUB		Subtitle / EQ		Fav		Fav / Marker / PC
	TXT		Text / Goto		PGUP		CH+ / Page+
	Multi		Display / Media		PGDN		CH- / Page-
	P / N		Picture / Format		Up		Up
	Recall		Back / Return		Right		Right
	1		1		FAV +		Vol+
	2		2		FAV -		Vol-
	3		3		Down		Down
	4		4		Left		Left
	5		5		OK		OK
	6		6		Menu		Menu / Home





Original	Replacement
	Exit / Cancel / Clear
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Pause / Step / Freeze
	Zoom / Size
	D.Menu / Top
	Info / Angle
	Shift + 8
	Shift + Yellow / YouTube /
	Shift + Text /
	Shift + 1
	Shift + 2
	Eject / Surround
	Stop / Hold
	Rec / Rec Mode

Original	Replacement
	Sound / Title
	<< / Tune-
	>> / Tune+
	Smart / List
	Play / Slow
	I<< / Preset-
	>I< / Setup / OPT /
	>>I / Preset+

