 


 

 
 
 
 
 
 
 



 
 
 

 
 
 

 
 
 






 



 
 


 
 
 
 
 


 
 






 
 
 


 
 

 
 
 

 




Original	Replacement	Original	Replacement
 Standby	 Power	 Back	 Back
 AV	 AV	 Exit / Clear	 Exit
 Mute	 Mute	 FAV / Program	 Shift + Pre Ch
 16:9 / Angle	 Format	 EPG / Goto	 Guide
 Zoom	 Shift + Eject	 Info / Display	 Info
 Subt	 Subt	 Menu	 Menu
 Audio	 Dual	 Up	 Up
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Vol -	 Vol -
 6	 6	 Vol +	 Vol +
 7	 7	 PR -	 Ch -
 8	 8	 PR +	 Ch +
 9	 9	 Red / Title	 Red
 0	 0	 Green / Root	 Green





Original	Replacement	Original	Replacement
 Yellow / Repeat	 Yellow		
 Blue / A-B	 Blue		
 TXT / I<<<	 Text		
 TXT / I<<<	 I<<<		
 Sound / >>>I	 Shift + Dual		
 Sound / >>>I	 >>>I		
 Picture / <<<	 Shift + Format		
 Picture / <<<	 <<<		
 Swap / >>>	 Pre Ch		
 Swap / >>>	 >>>		
 Eject	 Eject		
 Play / Pause	 Play		
 Play / Pause	 Pause		
 Stop	 Stop		
 Setup	 D. Menu		

