










 








Original	Replacement
 Mute	 Mute / Dimmer
 P100	 Fav / Marker / PC
 Power	 Power
 Reveal	 Info / Angle
 Double	 Smart / List
 1	 1
 2	 2
 3	 3
 Hold	 Stop / Hold
 4	 4
 5	 5
 6	 6
 SUB	 Subtitle / EQ
 7	 7
 8	 8
 9	 9
 Update	 Display / Media

Original	Replacement
 AV	 AV / Input / RDS
 0	 0
 -/--	 Guide / EPG / -/--
 Mix	 Shift + Text /
 TV/TX	 Text / Goto
 PR+	 CH+ / Page+
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Swap	 Back / Return
 PR-	 CH- / Page-
 Down	 Down
 16:9	 Setup / OPT /





Original	Replacement	Original	Replacement
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow / Timer	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Violet	 Shift + Red / Netflix /		
 Picture	 Picture / Format		
 Music note	 Sound / Title		
 PP	 Exit / Cancel / Clear		

