 

 





 

 

 

 

 

 

 

 


 
 

 

 





 



 
 
 

 

 
 




 



 

 



 
 

 






Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 DTV/ATV	 Info
 Recall	 Pre Ch
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Sleep	 Sleep

Original	Replacement
 Menu	 Menu
 Source	 AV
 Enter	 Ok
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Exit	 Exit
 Display	 Shift + Info
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 MTS	 Shift + Sleep
 Rec List	 D. Menu
 FAV/List	 Dual
 Rec	 Rec





	Original	Replacement	Original	Replacement
	Freeze	 Options		
	<</Guide	 <<		
	>>/Aspect	 >>		
	I<</Cancel	 +  Shift + Subt		
	>>I/Sub.Pg	 Back		
	Stop/Index	 Stop		
	Play/Pause/Time Shift	 Play		
	Tv/Radio	 TV/R		
	Subtitle	 Subt		
	Reveal	 +  Shift + Options		
	Size	 Format		
	Hold	 Eject		
	Text	 Text		
	Red	 Red		
	Green	 Green		
	Yellow	 Yellow		
	Cyan	 Blue		

