



Original	Replacement	Original	Replacement
 Power	 Power	 Page+	 CH+ / Page+
 DTV/VCR	 AV / Input / RDS	 Exit	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer	 FAV	 Fav / Marker / PC
 1	 1	 Page-	 CH- / Page-
 2	 2	 Up/CH+	 Up
 3	 3	 Left	 Left
 4	 4	 Vol-	 Vol-
 5	 5	 OK	 OK
 6	 6	 Right	 Right
 7	 7	 Vol+	 Vol+
 8	 8	 Down/CH-	 Down
 9	 9	 Red	 Red / Netflix / Search
 Info	 Info / Angle	 Green	 Green / APP / Repeat
 0	 0	 Yellow	 Yellow / YouTube / Repeat
 Recall	 Back / Return	 Audio	 Audio / Lang I/II
 Menu	 Menu / Home	 Blue	 Blue / Prime Video / Random
 EPG	 Guide / EPG / -/--	 Pause	 Pause / Step / Freeze

Original	Replacement	Original	Replacement
 Power	 DIMMER MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP - FREEZE	 HOLD	 REC MODE
 Play	 Pause	 Stop	 Red
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG I/II	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	
 HOME	 ANGLE	 INFO	
 MENU	 OK	 RETURN	
 CLEAR	 EXIT	 BACK	
 CANCEL	 LIST	 SMART	
 VOL+	 MEDIA	 CH PAGE	
 VOL-	 DISPLAY		
 TV	 DVD	 CD - STB	
 1	 TAPE	 TUNER	
4	USB	BLUETOOTH	
5	HDMI - BAT	PC	
7	GUIDE EPG	FAV MARKER	
NETFLIX	APP	YouTube	Prime Video
SEARCH	REPEAT	REPEAT A-B	RANDOM
 www.mandis.tv			



