


 







 

 



 
 






 
 

 

 

 

 


Original	Replacement	Original	Replacement
PWR On/Off	 Power	Menu Right	 Right
Mute	 Mute	Exit	 Exit
Epg	 +  Shift + Guide	Menu Down	 Down
Opt?	 Options	Audio	 Dual
Info	 Info	Back	 Back
App	 Media	Volume+	 Vol +
Subt.List	 Subt	CH/Page+	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
TV	 TV/R	CH/Page-	 Ch -
Video	 D. Menu	1. ?	 1
Text	 Text	2abc	 2
Display	 +  Shift + Info	3def	 3
Zoom	 Eject	4ghi	 4
Menu	 Menu	5jkl	 5
Menu Up	 Up	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 Ok	8tuv	 8



Original	Replacement	Original	Replacement
9wxyz	 9		 Shift + Ch +
Guide Pilote	 Guide		 Shift + Ch -
0/10	 0		
Tune-	 I<<		
Sys/Serv	 Smart		
Aft/Caf	 3D		
Tune+	 >>I		
FAV Pref.	 Pre Ch		
Red	 Red		
Freeze	 Pause		
East	 Rec		
Green	 Green		
Lang./Rewind	 <<		
H/V Play	 Play		
LNB F.Forward	 >>		
Yellow	 Yellow		
Blue	 Blue		

