 









 










 













 


 


 

















 



 







Original		Replacement		Original		Replacement	
	Power		Power		EPG		Guide / EPG / -/--
	Mute		Mute / Dimmer		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		OK		OK
	5		5		SAT		Shift + 0
	6		6		FAV		Fav / Marker / PC
	7		7		Tv/Radio		TV/Radio /
	8		8		Subtitle		Subtitle / EQ
	9		9		Find		Smart / List
	0		0		Pg Up		CH+ / Page+
	Audio		Audio / Lang I/II		PgDn		CH- / Page-
	Recall		Back / Return		Red		Red / Netflix / Search
	Menu		Menu / Home		Green		Green / APP / Repeat
	Exit		Exit / Cancel / Clear		Yellow		Yellow / YouTube / Repeat
	Info		Info / Angle		Blue		Blue / Prime Video / Random





	Original	Replacement	Original	Replacement
	<<	 << / Tune-		
	>>	 >> / Tune+		
	<	 << / Preset-		
	>	 >> / Preset+		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	Rec	 Rec / Rec Mode		
	Stop	 Stop / Hold		
	Text	 Text / Goto		

