



Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol+
 TV/RAD	 TV/Radio /	 Mute	 Mute / Dimmer
 Input	 AV / Input / RDS	 PR+/Page Up	 CH+ / Page+
 AV Mode	 Picture / Format	 Vol-	 Vol-
 Energy Saving	 Eject / Surround	 PR-/Page Down	 CH- / Page-
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Menu	 Menu / Home
 6	 6	 Down	 Down
 7	 7	 Return	 Back / Return
 8	 8	 Red	 Red / Netflix / Search
 9	 9	 Green/Stop	 Green / APP / Repeat
 List	 Smart / List	 Green/Stop	 Stop / Hold
 0	 0	 Yellow/Play	 Yellow / YouTube / Repeat
 Q.View	 Display / Media	 Yellow/Play	 Play / Slow

Original	Replacement	Original	Replacement
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			





Original	Replacement
 Blue/Pause	 Blue / Prime Video / Random
 Blue/Pause	 Pause / Step / Freeze
 Text/[≡]	 Text / Goto
 T.OPT/Left Arrow	 Left Arrow / Preset-
 T.OPT/Left Arrow	 Setup / OPT /
 T.OPT/Left Arrow	 Left Arrow / Tune-
 Subtitle/Right Arrow	 Right Arrow / Preset+
 Subtitle/Right Arrow	 Subtitle / EQ
 Subtitle/Right Arrow	 Right Arrow / Tune+
 Simplink	 Sleep / Timer
 Q.Menu	 D.Menu / Top
 Info	 Info / Angle
 Guide	 Guide / EPG / -/--
 FAV/Mark	 Fav / Marker / PC

Original	Replacement

