



Original	Replacement
Power	Power
Power Tv	Shift + Power
DVD	Shift + 2
HDD	Shift + 7
Open/Close	Eject / Surround
AV Input Tv	Shift + AV / Input / RDS
1	1
2	2
3	3
PR+ Tv	Shift + CH+ /
4	4
5	5
6	6
PR- Tv	Shift + CH- /
7	7
8	8
9	9

Original	Replacement
Vol+ Tv	Vol+
Rec	Rec / Rec Mode
0	0
AV Input	AV / Input / RDS
Vol- Tv	Vol-
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Home	Menu / Home
Up	Up
Menu List	D.Menu / Top
Left	Left
Enter	OK





Original	Replacement
	Right
	Return
	Down
	Display / Media
	Guide / EPG / -/--
	CH- / Page-
	CH+ / Page+
	Smart / List
	Red / FAV
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Subtitle / EQ
	Blue / Prime Video / Random
	Text / Goto
	Audio / Lang I/II
	Sound / Title
	Fav / Marker / PC

Original	Replacement
	Clear
	Timeshift
	Tv/DVD
	Exit / Cancel / Clear
	Sleep / Timer
	Shift + 1

