 






 
 






 










 

 
 



 


Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 Pre Ch
 TXT	 Text
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

Original	Replacement
 Guide	 Guide
 ?	 Dual
 Exit	 Exit
 Menu	 Menu
 Back	 Back
 Tools	 Options
 @	 TV/R
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 PR+	 Ch +
 PR-	 Ch -
 Source	 AV





Original	Replacement	Original	Replacement
	Mute		Mute
	I<		I<<
	>I		>>I
	<<		<<
	>>		>>
	Rec		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	3D		3D
	Q		Format
	[...].		Subt
	Netflix		Shift + Media
	My Media		Media

