

 
 
 

 
 
 









 
 

 
 

 

 
 
 

 
 

 
 

 
 


 

 
 
 


 








	Original	Replacement		Original	Replacement
	Power		Power		<<
	1		1		>>
	2		2		<<
	Eject/Open-Close		Eject		Stop
	VCR		Smart		Play
	DVD		Media		Pause/Step
	3		3		Disc Menu/List
	4		4		Home
	5		5		Shift + Smart
	6		6		Display
	7		7		Return
	8		8		Enter
	9		9		Up
	0		0		PR/CH/TRK+
	Clear		Exit		PR/CH/TRK-
	AV/Input		AV		Down
	>>		>>		Right
					Left





Original		Replacement	
	O)/)/Audio		Dual
	[...]/Subtitle		Subt
	Zoom	+	Shift + Eject
	I.Skip		3D
	Rec		Rec
	TV/VCR		TV/R
	CHP.ADD		Text
	Title		Options
	Rec Mode	+	Shift + Rec
	Dubbing		Mute
	Play Mode	+	Shift + Play
	Marker		Pre Ch
	Search	+	Shift + TV/R
	Thumbnail		List
	Power Tv	+	Shift + Power
	AV/Input Tv	+	Shift + AV
	Vol+ Tv		Vol +

Original		Replacement	
	Vol- Tv		Vol -
	PR/CH+ Tv	+	Shift + Ch +
	PR/CH- Tv	+	Shift + Ch -

