


 

 

 

 

 

 

 



 



 

 

 

 



 

 

 

 



 

 





 







 

 

 

 





Original	Replacement
 D.Menu	 D.Menu / Top
 Power	 Power
 Open / Close	 Eject / Surround
 Info	 Info / Angle
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 Audio / Lang I/II	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 CH. List	 Smart / List
 Screen	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Replacement
 7	 7
 8	 8
 9	 9
 Source	 AV / Input / RDS
 0	 0
 Q.View	 Shift + Menu /
 Mute	 Mute / Dimmer
 Guide	 Guide / EPG / -/-
 Vol +	 Vol+
 P+	 CH+ / Page+
 Vol -	 Vol-
 P -	 CH- / Page-
 Menu	 Menu / Home
 FAV	 Fav / Marker / PC
 Up	 Up
 Left	 Left
 OK	 OK





Original	Replacement	Original	Replacement
 Right	 Right	 [ ≡ ] / Setup	 Shift + Setup / OPT / Tools
 Down	 Down	 [ /≡ ] / Title	 Shift + Sound / Title
 Exit	 Exit / Cancel / Clear	 [....] / Search	 Text / Goto
 Record	 Rec / Rec Mode	 [....] / Search	 Shift + Text /
 [X] / Repeat	 Back / Return	 [ □ ] / 10+	 Shift + 9
 ► / Index	 Play / Slow	 [ □ ] / 10+	 Shift + 0
 Pause	 Pause / Step / Freeze	 [ ? ] / Program	 Shift + Guide / EPG / -/-
 Stop	 Stop / Hold	 [ ◆ ] / A-B	 Shift + Fav / Marker / PC
 Red / ◀◀ / REV	 Shift + Red / Netflix /	 ⊕ / Angle / Rec. List	 Shift + TV/Radio / Program
 Red / ◀◀ / REV	 Red / Netflix / Search	 ⊕ / Angle / Rec. List	 Shift + Sleep / Timer
 Green / ▶▶ / FWD	 Shift + Green / APP /	 D.Call	 Shift + D.Menu / Top Menu
 Green / ▶▶ / FWD	 Green / APP / Repeat		
 Yellow / ◀◀◀ / Prev	 Shift + Yellow / YouTube /		
 Yellow / ◀◀◀ / Prev	 Yellow / YouTube / Repeat		
 Blue / ▶▶▶ / Next	 Blue / Prime Video / Random		
 Blue / ▶▶▶ / Next	 Shift + Blue / Prime		
 [ ≡ ] / Setup	 Setup / OPT /		

