

































































Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Green		Green / APP / Repeat
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	1-		Guide / EPG / -/--
	Vol-		Vol-
	Vol+		Vol+
	< 0		Down
	0 >		Up
	< *		Left
	* >		Right
	[>> ]		>>  / Preset+
	[<<]		<< / Tune-
	[v]		Text / Goto
	[3>]		Zoom / Size
	[>>]		>> / Tune+
	Rec		Rec / Rec Mode
	[<]		AV / Input / RDS
	(v)		Picture / Format
	[ >]		Pause / Step / Freeze
	Play		Play / Slow
	↔		Stop / Hold

