



Original	Replacement	Original	Replacement
	Power		OPT Coax
	Mute		Setup / OPT /
	Movie		Bluetooth
	Music		Line In
	Vol+		USB
	Vol+		
	I<		
	I<		
	Play		
	Pause		
	Pair		
	>I		
	>I		
	Vol-		
	Vol-		
	News		
	HDMI ARC		
	Power		Setup / OPT /
	Mute / Dimmer		9
	TV/Radio /		3
	Audio / Lang I/II		8
	Vol+		
	Vol+		
	I<< / Preset-		
	Left		
	Play / Slow		
	Pause / Step / Freeze		
	OK		
	>>I / Preset+		
	Right		
	Vol-		
	Vol-		
	Info / Angle		
	0		

