 

 



 





















 

 

























 















Original		Replacement		Original		Replacement	
	Power		Power		CH.List		Smart / List
	Info		Info / Angle		[=]		D.Menu / Top
	Input		AV / Input / RDS		Up		Up
	[++]		Setup / OPT /		Colors		Fav / Marker / PC
	[/]1		Picture / Format		Left		Left
	[/]2		Zoom / Size		OK		OK
	1		1		Right		Right
	2		2		Back		Back / Return
	3		3		Down		Down
	4		4		Play		Play / Slow
	5		5		Pause		Pause / Step / Freeze
	6		6		Vol+		Vol+
	7		7		Home		Menu / Home
	8		8		CH+		CH+ / Page+
	9		9		Vol-		Vol-
	Guide		Guide / EPG / -/-		Mute		Mute / Dimmer
	0		0		CH-		CH- / Page-





Original		Replacement		Original		Replacement	
	TXT		Text / Goto				
	Voice		Audio / Lang I/II				
	Sub.		Subtitle / EQ				
	Netflix		Red / Netflix / Search				
	YouTube		Yellow / YouTube / Repeat				
	Prime Video		Blue / Prime Video / Random				
	Rakuten Tv		TV/Radio /				

