
 
 





 

 






 


 


 


 

 







Original	Replacement	Original	Replacement
On/Off	 Power	Back	 Back
Mute	 Mute	Volume+	 Vol +
Update	 D. Menu	Chan.Up	 Ch +
Reveal	 List	Volume-	 Vol -
Return TV	 TV/R	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Stop	 Stop	2	 2
Info	 Info	3	 3
Txt Expand	 Eject	4	 4
TV/AV	 AV	5	 5
Menu	 Menu	6	 6
Menu Up	 Up	7	 7
Menu Left	 Left	8	 8
OK Enter	 Ok	9	 9
Menu Right	 Right	Guide -/-- 1.	 Guide
Menu Off	 Exit	0/10	 0
Menu Down	 Down	Red	 Red



