




 

 

 

 

 



 

 



 





 

 

 



 

 

 



 










 
 

 



 








Original	Replacement	Original	Replacement
 Power	 Power	 Blue/Picture	 Blue
 Mute	 Mute	 O/I/I	 Dual
 1	 1	 Menu	 Menu
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 OK	 Ok
 7	 7	 [≡]	 Text
 8	 8	 Back	 Back
 9	 9	 P+	 Ch +
 0	 0	 P-	 Ch -
 i	 Info	 Vol+	 Vol +
 AV	 AV	 Vol-	 Vol -
 Red/Zoom	 Red	 ^/[+]	 Format
 Green/(↔)	 Green	 Play/[?]	 Play
 Yellow/Timer	 Yellow	 >>/[◆]	 >>




 

 

 









 

 



 





 











 

 











 







 

 






	Original	Replacement	Original	Replacement
	~/Timer	Options		
	Stop/[X]	Stop		
	Pause/[≡i]	Pause		
	[■]	Subt		
	[←■]	TV/R		
	[↕■]	3D		
	♪	+ Shift + Dual		





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	i		Info
	O/I/II		Dual
	[≡]		Text
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red/Zoom		Red
	Green/(↔)		Green
	Yellow/Timer		Yellow
	Blue/Picture		Blue
	<<		<<
	>>/[◆]		>>
	^[+]		Format
	~/Timer		Options
	Rec/Top Menu		Rec
	Play/[?]		Play
	Stop/[X]		Stop
	Pause/[≡i]		Pause
	[■]		Subt
	[←■]		TV/R



 




 

 



 

 

 







 
 


 
 







 


 



 





 





 



 



 






Original		Replacement		Original		Replacement	
	[↕▪]		3D				
	♪		Shift + Dual				
	Menu		Menu				
	Back		Back				
	OK		Ok				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				






 














Original	Replacement	Original	Replacement
 Power	 Power	 Green/(↔)	 Green
 Mute	 Mute	 Yellow/Timer	 Yellow
 1	 1	 Blue/Picture	 Blue
 2	 2	 OK	 Ok
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 P+	 Ch +
 8	 8	 P-	 Ch -
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 i	 Info	 <<	 <<
 AV	 AV	 Play/[?]	 Play
 O/I/II	 Dual	 >>/[♦]	 >>
 Menu	 Menu	 Stop/[X]	 Stop
 Red/Zoom	 Red	 Pause/[≡i]	 Pause





Original	Replacement	Original	Replacement
 ^/[+]	 Format		
 √/Timer	 Options		
 [■]	 Subt		
 [←■]	 TV/R		
 [↓■]	 3D		
 ♪	 Shift + Dual		
 Back	 Back		
 [≡]	 Text		

