
 






 

 




 



 

Original	Replacement
	 Power
	 Mute / Dimmer
	 Picture / Format
	 Sound / Title
	 Fav / Marker / PC
	 Sleep / Timer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Shift + Guide / EPG / -/--
	 0

Original	Replacement
	 Back / Return
	 Vol+
	 Smart / List
	 CH+ / Page+
	 Vol-
	 Shift + Picture / Format
	 CH- / Page-
	 Guide / EPG / -/--
	 Audio / Lang I/II
	 Rec / Rec Mode
	 Menu / Home
	 Up
	 Exit / Cancel / Clear
	 Left
	 OK
	 Right
	 AV / Input / RDS





Original	Replacement
 Down	 Down
 Display	 Display / Media
 Red	 Red / Netflix / Search
 <<	 << / Tune-
 Green	 Green / APP / Repeat
 >>	 >> / Tune+
 Yellow	 Yellow / YouTube / Repeat
 I<<	 I<< / Preset-
 Blue	 Blue / Prime Video / Random
 >>I	 >>I / Preset+
 Text	 Text / Goto
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Index	 Info / Angle
 Size	 Zoom / Size
 Reveal	 D.Menu / Top

Original	Replacement
 Hold	 Shift + Stop /
 Subpage	 Eject / Surround
 Subtitle	 Subtitle / EQ

