



| Original | Replacement | Original | Replacement |
|---|---|---|---|
|  Power |  Power |  Green / Slow |  Green |
|  I<< |  I<< |  Yellow / Repeat |  Yellow |
|  >>I |  >>I |  Blue / A-B |  Blue |
|  << |  << |  CH + |  Ch + |
|  >> |  >> |  CH - |  Ch - |
|  Eject |  Eject |  TV Menu |  Menu |
|  Play / Pause |  Play |  Source |  AV |
|  Play / Pause |  Pause |  Vol + |  Vol + |
|  Stop |  Stop |  Vol - |  Vol - |
|  TV/TXT / |  Text |  DTV |  Smart |
|  Cancel / Zoom |  Shift + Eject |  DVD-Setup |  D. Menu |
|  Reveal / Subtitle |  Shift + Subt |  Up |  Up |
|  Hold / Menu |  Options |  Down |  Down |
|  Size / Angle |  Format |  Right |  Right |
|  Subpage / Title |  Shift + Text |  Left |  Left |
|  Index / Goto |  Media |  OK |  Ok |
|  Red / Program |  Red |  Exit |  Exit |



