



Original	Replacement
Function	Smart / List
Power	Power
Open/Close	Eject / Surround
Sleep	Sleep / Timer
Title	Sound / Title
Display	Display / Media
Menu	Menu / Home
Setup	Setup / OPT /
Up / Preset Up	Shift + >>1 / Preset+
Up / Preset Up	Up
Left/Tun-	Shift + << /
Left/Tun-	Left
Enter	OK
Right/Tun+	Right
Right/Tun+	Shift + >> /
Down / Preset	Shift + I<< / Preset-
Down / Preset	Down

Original	Replacement
Return	Back / Return
Rec	Rec / Rec Mode
Stop	Stop / Hold
Play/MO/ST	Play / Slow
Pause/Step	Pause / Step / Freeze
I<< Skip	I<< / Preset-
<< Scan	<< / Tune-
Scan >>	>> / Tune+
Skip >>I	>>I / Preset+
Random/Repeat	Green / APP / Repeat
Random/Repeat	Blue / Prime Video / Random
Vol+	Vol+
♪/LG EQ	Audio / Lang I/II
Mute	Mute / Dimmer
Vol-	Vol-
EQ ♪	Shift + Subtitle / EQ
1	1



Down



Original	Replacement
2	DVD 2
3	CD - STB 3
CLEAR	CLEAR EXIT CANCEL Exit / Cancel / Clear
4	VIDEO 4
5	TAPE 5
6	TUNER 6
SUBTITLE	EQ SUBTITLE Subtitle / EQ
7	AUX - HDD 7
8	USB 8
9	BLUETOOTH 9
0	HDMI - BAT 0
POWER	SHIFT + POWER Shift + Power
+ PR/CH	SHIFT + CH PAGE Shift + CH+ /
+ VOL	SHIFT + VOL Shift + Vol+
PROG.MEMO	PROGRAM TV/RADIO TV/Radio /
INPUT	SHIFT + RDS AV INPUT Shift + AV / Input / RDS
PR/CH -	SHIFT + CH PAGE Shift + CH- /

Original	Replacement
VOL -	SHIFT + VOL Shift + Vol-
RDS	RDS AV INPUT AV / Input / RDS
RESOLUTION PTY	GOTO TEXT Text / Goto

