



Original	Replacement	Original	Replacement
RATIO	Picture / Format	VOL+	Vol+
POWER	Power	MUTE	Mute / Dimmer
INPUT	AV / Input / RDS	PR+/PAGE UP	CH+ / Page+
AV MODE	Info / Angle	VOL-	Vol-
ENERGY	Sleep / Timer	PR-/PAGE	CH- / Page-
1	1	UP	Up
2	2	LEFT	Left
3	3	OK	OK
4	4	RIGHT	Right
5	5	MENU	Menu / Home
6	6	DOWN	Down
7	7	RETURN	Back / Return
8	8	RED	Red / Netflix / Search
9	9	GREEN	Green / APP / Repeat
LIST	Smart / List	STOP	Stop / Hold
0	0	YELLOW	Yellow / YouTube / Repeat
Q.VIEW	Display / Media	PLAY	Play / Slow

Original	Replacement	Original	Replacement
RATIO	Picture / Format	VOL+	Vol+
POWER	Power	MUTE	Mute / Dimmer
INPUT	AV / Input / RDS	PR+/PAGE UP	CH+ / Page+
AV MODE	Info / Angle	VOL-	Vol-
ENERGY	Sleep / Timer	PR-/PAGE	CH- / Page-
1	1	UP	Up
2	2	LEFT	Left
3	3	OK	OK
4	4	RIGHT	Right
5	5	MENU	Menu / Home
6	6	DOWN	Down
7	7	RETURN	Back / Return
8	8	RED	Red / Netflix / Search
9	9	GREEN	Green / APP / Repeat
LIST	Smart / List	STOP	Stop / Hold
0	0	YELLOW	Yellow / YouTube / Repeat
Q.VIEW	Display / Media	PLAY	Play / Slow



