
 
 


 




 
 





 
 
 


 

 
 
 
 

 
 

 
 
 
 




 




 



 
 


 
 



 
 
 
 



 

 

 


 


 
 




 








 
 


 
 


 

 

 

 


 


 
Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Return	 Back
Stop	 Stop	Menu Down	 Down
Pause	 Pause	Volume+	 Vol +
Auto/Track	 Red	Progr.	 Sleep
Slow Up	 Ch +	Next	 >>
Subt.	 Subt	Volume-	 Vol -
Rep/A-B	 +  Shift + Text	Top Menu	 D. Menu
Title	 List	Prev.	 <<
DVD/TV	 Media	1	 1
Repeat/1/All	 Text	2	 2
Zoom	 +  Shift + Eject	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 +  Shift + Info	6	 6
Menu Left	 Left	7	 7




 
 


 

 
 






 


 

 



 


 




 



Original	Replacement	Original	Replacement
8	 8	ON/Off	 +  Shift + Power
9	 9	Mode	 Smart
Store	 Green	Key-	 +  Shift + Left
Digest	 Yellow	Input Source	 AV
Random	 +  Shift + Format	3D	 3D
Play	 Play	F.Forward	 >>
Game	 Blue	Play/Back	 +  Shift + Play
+10	 Guide	Timer	 +  Shift + AV
Np	 +  Shift + List	Open/Close	 Eject
Remain	 Exit	Resume	 +  Shift + Pause
Karaoke/Step	 +  Shift + >>	Audio	 +  Shift + Dual
Shuffle	 +  Shift + TV/R	Key+	 +  Shift + Right
0	 0	Vocal/Assist	 +  Shift + Vol +
C/CH	 Pre Ch	Search	 TV/R
Record	 Rec	Tone	 +  Shift + Vol -
Video	 Options	Info	 Info
Rewind	 <<	Angle	 Format

Original	Replacement	Original	Replacement
ON/Off	 +  Shift + Power	Mode	 Smart
Key-	 +  Shift + Left	Input Source	 AV
3D	 3D	F.Forward	 >>
Play/Back	 +  Shift + Play	Timer	 +  Shift + AV
Open/Close	 Eject	Resume	 +  Shift + Pause
Audio	 +  Shift + Dual	Key+	 +  Shift + Right
Vocal/Assist	 +  Shift + Vol +	Search	 TV/R
Tone	 +  Shift + Vol -	Info	 Info
Angle	 Format		



Original	Replacement	Original	Replacement
Lang	 Dual		



Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Progr.	 Sleep
Subt.	 Subt	Return	 Back
Auto/Track	 Red	Menu Down	 Down
Slow Up	 Ch +	Top Menu	 D. Menu
Rep/A-B	 +  Shift + Text	Volume+	 Vol +
Title	 List	Volume-	 Vol -
Stop	 Stop	1	 1
Pause	 Pause	2	 2
Repeat/1/All	 Text	Next	 >>
Zoom	 Eject	3	 3
DVD/TV	 AV	4	 4
Menu	 Menu	Prev.	 <<
Menu Up	 Up	5	 5
Display	 +  Shift + Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
Rewind	 <<	8	 8
Play	 Play	Audio	 +  Shift + Dual
Record	 Rec	Info	 Info
Np	 Green	9	 9
Angle	 Format	+10	 Guide
Video	 Smart	0	 0
Remain	 Blue	C/CH	 Pre Ch
Pbc	 Yellow	ON/Off	 +  Shift + Power
Syst.Preset	 Media	Key-	 +  Shift + Left
F.Forward	 >>	Auto Scan	 +  Shift + Ok
Setup	 Options	Key+	 +  Shift + Right
Timer	 +  Shift + AV	Echo+	 +  Shift + Ch +
3D	 3D	Echo-	 +  Shift + Ch -
Play/Back	 +  Shift + Play	Digest	 +  Shift + Guide
Shuffle	 +  Shift + TV/R		
Lang	 Dual		
Random	 +  Shift + Format		

