 

 

 

 

 














 


 

 


 




Original	Replacement
 Power	 Power
 Input	 AV / Input / RDS
 Settings/Q.Men	 D.Menu / Top
 []/Ratio	 Picture / Format
 [?]	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Guide	 Guide / EPG / -/--
 Q.View	 Shift + Fav / Marker / PC

Original	Replacement
 FAV	 Fav / Marker / PC
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 Recent	 Zoom / Size
 Smart	 Smart / List
 My Apps	 Display / Media
 Up	 Up
 Down	 Down
 Live Menu	 Menu / Home
 Left	 Left
 Right	 Right
 OK	 OK
 Back	 Back / Return





Original		Replacement		Original	Replacement
	Exit		Exit / Cancel / Clear		
	Red		Red / Netflix / Search		
	GReen		Green / APP / Repeat		
	Yellow		Yellow / YouTube / Repeat		
	Blue		Blue / Prime Video / Random		
	Text		Text / Goto		
	T.Opt		Setup / OPT /		
	Sleep		Sleep / Timer		
	Stop		Stop / Hold		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	<<		<< / Tune-		
	>>		>> / Tune+		
	Rec		Rec / Rec Mode		
	Subtitle		Subtitle / EQ		
	AD/*		Audio / Lang I/II		
	Tv/Rad		TV/Radio /		

