




 

 
 
 

 
 


 









Original	Replacement
	 Power
	 Eject / Surround
	 Vol+
	 Menu / Home
	 CH+ / Page+
	 Vol-
	 Mute / Dimmer
	 CH- / Page-
	 Setup / OPT /
	 Green / APP / Repeat
	 Exit / Cancel / Clear
	 Sound / Title
	 Left
	 I<< / Preset-
	 Play / Slow
	 Pause / Step / Freeze
	 >>I / Preset+

Original	Replacement
	 Right
	 Stop / Hold
	 Info / Angle
	 Shift + Dimmer / Mute
	 Sleep / Timer
	 Shift + Sleep / Timer
	 OK
	 D.Menu / Top
	 Rec / Rec Mode
	 Picture / Format

