
















 

 
 

 




 









 

 









 

 

 






 

 

 





 




 


 

 

 

 

Original	Replacement
 Power	 Power
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 I - II	 Audio / Lang I/II
 Fav	 Fav / Marker / PC
 AV / Source	 AV / Input / RDS
 TV / DTV	 TV/Radio /
 1	 1
 2	 2
 3	 3
 Red / Page+	 Red / Netflix / Search
 Red / Page+	 Shift + CH+ /
 4	 4
 5	 5
 6	 6
 Green / Page-	 Shift + CH- /
 Green / Page-	 Green / APP / Repeat

Original	Replacement
 7	 7
 8	 8
 9	 9
 Yellow	 Yellow / YouTube / Repeat
 -/-- / Exit	 Shift + Guide / EPG / -/--
 -/-- / Exit	 Exit / Cancel / Clear
 0	 0
 M	 Menu / Home
 Blue	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK / Select	 OK
 Right	 Right
 Down	 Down
 P+	 CH+ / Page+
 P-	 CH- / Page-
 V-	 Vol-





	Original	Replacement		Original	Replacement
	V+	 Vol+			 Zoom / Size
	Stop	 Stop / Hold			 Shift + AV / Input / RDS
	Play	 Play / Slow			 Guide / EPG / -/-
	Pause	 Pause / Step / Freeze			 Picture / Format
	LIB	 Display / Media			
	Rec	 Rec / Rec Mode			
	<<	 << / Tune-			
	>>	 >> / Tune+			
	Time	 Sleep / Timer			
	PIP-	 I<< / Preset-			
	PIP+	 >>I / Preset+			
	P<P / Swap	 Back / Return			
	PP	 Eject / Surround			
	Text	 Text / Goto			
	Subpage	 Subtitle / EQ			
	Hold	 Shift + Stop /			
	Cancel	 Shift + Exit / Cancel / Clear			

	Original	Replacement		Original	Replacement
	Size / Wide	 Zoom / Size			 Shift + AV / Input / RDS
	Index / Guide	 Guide / EPG / -/-			 Picture / Format

