




 






| Original | Replacement | Original | Replacement |
|--|--|--|--|
|  Power |  Power |  Exit |  Exit |
|  Mute |  Mute |  Display |  Shift + Info |
|  1 |  1 |  Enter |  Ok |
|  2 |  2 |  Up |  Up |
|  3 |  3 |  Down |  Down |
|  4 |  4 |  Left |  Left |
|  5 |  5 |  Right |  Right |
|  6 |  6 |  Vol+ |  Vol + |
|  7 |  7 |  Vol- |  Vol - |
|  8 |  8 |  CH+ |  Ch + |
|  9 |  9 |  CH- |  Ch - |
|  0 |  0 |  FAV/List |  Dual |
|  Recall |  Pre Ch |  Freeze |  Options |
|  Source |  AV |  Tv/Radio |  TV/R |
|  Menu |  Menu |  Rec |  Rec |
|  P.Mode |  Shift + Format |  Red |  Red |
|  S.Mode |  Shift + Dual |  Green |  Green |



