




| Original   | Replacement  |
|--|--|
|  Power        |  Power                |
|  Mute         |  Mute / Dimmer        |
|  1            |  1                    |
|  2            |  2                    |
|  3            |  3                    |
|  4            |  4                    |
|  5            |  5                    |
|  6            |  6                    |
|  7            |  7                    |
|  8            |  8                    |
|  9          |  9                  |
|  TV / Radio |  TV/Radio /         |
|  0          |  0                  |
|  ←PR        |  Back / Return      |
|  EPG        |  Guide / EPG / -/-- |
|  Up / PR+   |  Up                 |
|  Up / PR+   |  Shift + Up         |

| Original  | Replacement  |
|---|--|
|  Menu                |  Menu / Home                  |
|  Left / Vol-         |  Shift + Left                 |
|  Left / Vol-         |  Left                         |
|  OK / List           |  OK                           |
|  OK / List           |  Shift + OK                   |
|  Right / Vol+        |  Shift + Right                |
|  Right / Vol+        |  Right                        |
|  Info                |  Info / Angle                 |
|  Down / PR-          |  Shift + Down                 |
|  Down / PR-          |  Down                         |
|  Exit              |  Exit / Cancel / Clear      |
|  Red / Audio       |  Shift + Red / Netflix /    |
|  Red / Audio       |  Red / Netflix / Search     |
|  Page+             |  CH+ / Page+                |
|  Yellow / Subtitle |  Shift + Yellow / YouTube / |
|  Yellow / Subtitle |  Yellow / YouTube / Repeat  |
|  Page-             |  CH- / Page-                |





| Original  | Replacement  |
|---|--|
|  Green / TXT |  Shift + Green / APP / Repeat |
|  Green / TXT |  Green / APP / Repeat         |
|  Pause       |  Pause / Step / Freeze        |
|  Blue / L/R  |  Blue / Prime Video / Random  |
|  ::          |  Text / Goto                  |
|  FAV         |  Fav / Marker / PC            |
|  UHF         |  Setup / OPT /                |
|  PAL / NTSC  |  D.Menu / Top                 |
|  Record      |  Rec / Rec Mode               |
|  Play        |  Play / Slow                  |
|  Stop       |  Stop / Hold                 |
|  TV / AV   |  AV / Input / RDS           |
|  <<        |  << / Tune-                 |
|  >>        |  >> / Tune+                 |
|  < Seek    |  Shift + << /               |
|  Seek >    |  Shift + >> /               |

| Original | Replacement |
|----------|-------------|
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |

