





| Original | Replacement | | |
|---|-------------|---|-------------------------|
|  | Power |  | Power |
|  | Sub-T |  | Subtitle / EQ |
|  | Search |  | Shift + Red / Netflix / |
|  | TV |  | TV/Radio / |
|  | Eject |  | Eject / Surround |
|  | Green |  | Green / APP / Repeat |
|  | Widget |  | Smart / List |
|  | Vol + |  | Vol+ |
|  | Red |  | Red / Netflix / Search |
|  | Mute |  | Mute / Dimmer |
|  | Vol - |  | Vol- |
|  | Guide |  | Guide / EPG / -/-- |
|  | Info |  | Info / Angle |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |

| Original | Replacement | | |
|---|--------------|---|-----------------------------|
|  | Down |  | Down |
|  | Option |  | Shift + Setup / OPT / Tools |
|  | Option |  | Setup / OPT / |
|  | Back |  | Back / Return |
|  | << |  | << / Tune- |
|  | I<< |  | I<< / Preset- |
|  | Play / Pause |  | Pause / Step / Freeze |
|  | Play / Pause |  | Play / Slow |
|  | >> |  | >> / Tune+ |
|  | >>I |  | >>I / Preset+ |
|  | Stop |  | Stop / Hold |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

