



Original	Replacement	Original	Replacement
 Power	 Power	 4	 4
 Red / TV/SAT	 Red	 5	 5
 Red / TV/SAT	 AV	 6	 6
 Green / TV/Radio	 Green	 7	 7
 Green / TV/Radio	 TV/R	 8	 8
 Yellow / Zoom	 Yellow	 9	 9
 Yellow / Zoom	 Eject	 0	 0
 Blue / List	 Blue	 Fav	 Pre Ch
 Blue / List	 List	 Mute	 Mute
 Audio	 Dual	 Up	 Up
 M/P	 Smart	 Left	 Left
 Timer	 Shift + AV	 OK	 Ok
 Timer	 Sleep	 Right	 Right
 Info	 Info	 Down	 Down
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 Vol+	 Vol +





	Original	Replacement		Original	Replacement
	Vol-	 Vol -			
	Exit	 Exit			
	Menu	 Menu			
	P+	 Shift + Ch +			
	P-	 Shift + Ch -			
	Text	 Text			
	P+	 >>I			
	P-	 I<<			
	EPG	 Guide			
	Recall	 Back			
	Pause	 Pause			

